

ClearOne®

CHAT® 150 BT Speakerphones



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 500
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support





Tel: +1.801.974.3760
audiotechsupport@clearone.com

Notices

© 2023 ClearOne, Inc. All rights reserved.
Information in this document is subject to change without notice.
Document: QSG-0093-001v1.1 August 2023

Important Safety Instructions

1. Read, follow and keep these instructions.
2. Heed all warnings.
3. Do not use this apparatus near water.
4. Clean only with dry cloth.
5. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Only use attachments/accessories specified by the manufacturer.
8. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in fire or electric shock.
10. This product can interfere with electrical equipment such as tape recorders, TV sets, radios, computers and microwave ovens if placed in close proximity.
11. Class 2 wiring IS REQUIRED. Only qualified personnel should wire and install.

<p>WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE</p>	 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGEROUS VOLTAGE INSIDE THE PRODUCT.</p>	<p>CAUTION</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>	 <p>Use only in non-tropical locations.</p>
	<p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>AVIS RISQUE DU CHOC ELECTRIQUE - NE PAS OUVRIR</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>Use only at altitudes of 2000 meters or less.</p>		
SEE MARKING ON BOTTOM/BACK OF PRODUCT				

Packing List

Verify that you have received all parts associated with each of the components.

Inspect your shipment carefully. If the shipment shows obvious signs of damage, retain original boxes and packing material for inspection by the carrier, and contact them immediately. ClearOne is not responsible for product damage incurred during shipment.

Part No: 910-156-500

CHAT150 BT




Cable, USB 2.0, Type A Male to Type C Male, 12 ft.



Bluetooth Adapter



Features and Connections

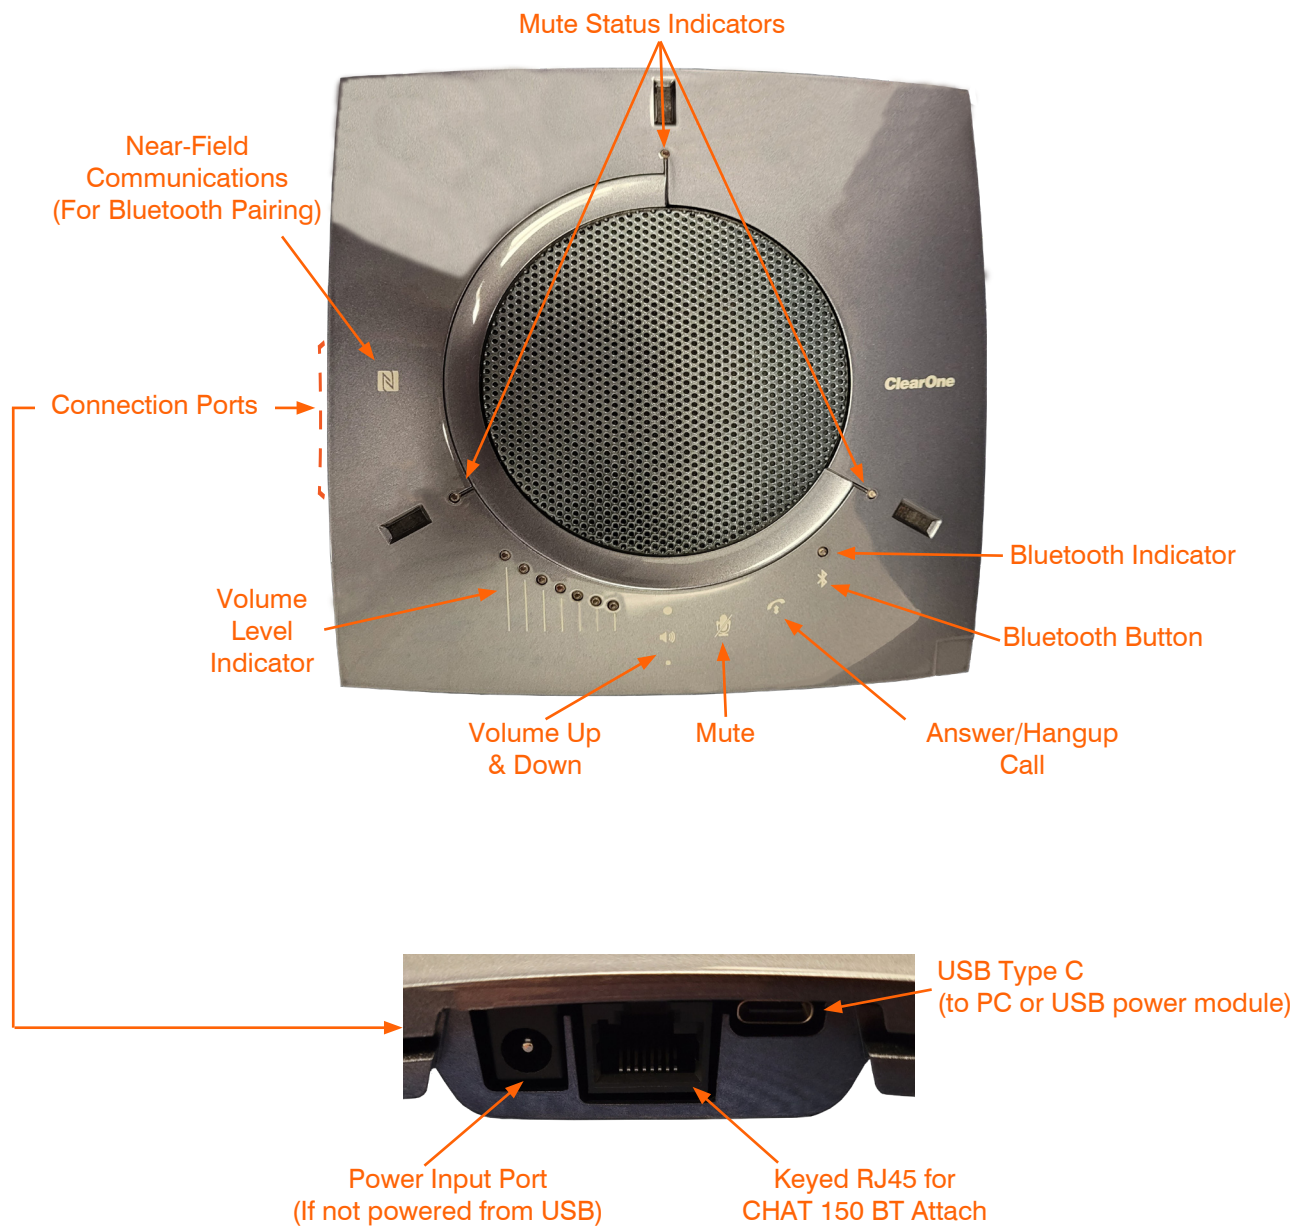

Warning: Do not connect a CHAT 150 BT to a CHAT 150.

Powering the CHAT150 BT


How you power your CHAT150 BT depends on whether or not you connect it to a computer.

Powering the CHAT150 BT when connected to a Computer

Use the included USB cable to power the CHAT150 BT from your PC or laptop.



Powering the CHAT150 BT when not connected to a Computer

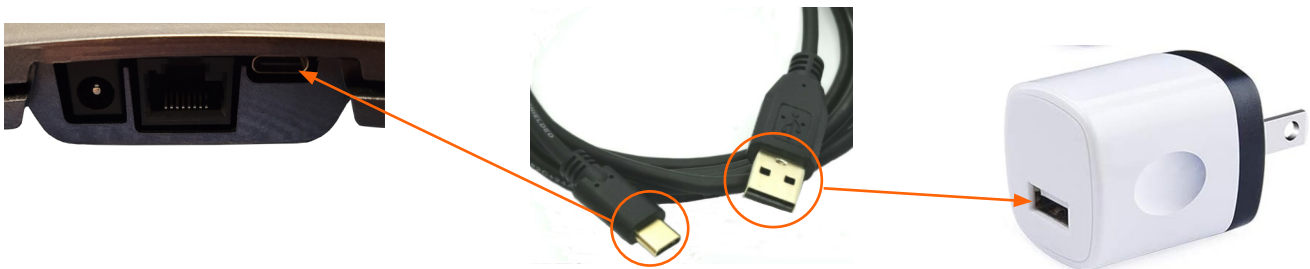

Connecting the CHAT150 BT

USB


Use the included USB cable to connect the CHAT150 BT to your PC.

Bluetooth

The CHAT150 BT can use NFC () technology to pair Bluetooth devices.

Tap the NFC logo on CHAT150 BT with the NFC-capable device.

To pair a **non-NFC** device, perform the following steps.

1. Touch the Bluetooth button symbol () on the CHAT150 BT.
 - a. If the LED is blinking blue at a one second rate, then the device is in pairing mode. Once connected, the LED will turn a constant blue.
 - b. To disconnect from a device, pushing the BT will disconnect that device but it will remain paired. Then the CHAT150 BT will be in pairing mode for other devices.

2. In your Bluetooth-enabled device, navigate to your Bluetooth settings (e.g. for iOS users, Settings > Bluetooth).
3. Select “CHAT_XXXX” (XXXX indicates the last 4 digits of the MAC address).

Information about how to change the pairing name is available in the [CHAT150 BT User's Manual](#).

When a device is paired, a short beep plays followed by a higher frequency beep.

When a device is unpaired, a short beep plays followed by a lower frequency beep.



Bluetooth button

Reminder: Place the CHAT 150 BT unit on a **flat horizontal surface**.

Using the CHAT150 BT

LED Indicators

- 1 The three microphone LED indicators illuminate blue when the CHAT150 BT microphones are active. The indicators illuminate red when the microphones are muted.
- 2 The seven volume LED indicators illuminate blue to indicate the current volume setting—more lights indicate higher volume.
- 3 Bluetooth indicator and control - for more information on Bluetooth operation, please refer to the User's Manual.

Controls

- 4 To **adjust the volume level**, touch the volume up/down symbol (indicated by a large dot and a small dot). To **rapidly change volume**, press & hold either symbol.
- If you are using the CHAT150 BT with a PC, you can also use the operating system's speaker volume control.
- 5 To **mute** the CHAT150 BT's microphone, touch the mute symbol. To **unmute**, touch the mute symbol again.
- 6 To **answer or hang up** a USB connected call (with supported communications apps) touch the answer/hangup call symbol.

