

ClearOne®

UNITE® 260N Pro Camera



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 600
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support

Tel: +1.801.974.3760
videotechsupport@clearone.com

Notices

© 2025 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0177-001v1.0 January 2025

Important Safety Information

1. Before you set up the camera, read this manual carefully. Follow the setup instructions indicated in this manual.
2. Keep this manual for future use.
3. To prevent electric shock, do not remove screws or the camera housing. No self-serviceable parts are inside the housing

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGEROUS VOLTAGE INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN
AVIS RISQUE DU CHOC ELECTRIQUE - NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.



Use only in non-tropical locations.



Use only at altitudes of 2000 meters or less.

SEE MARKING ON BOTTOM/BACK OF PRODUCT

Packing List

Verify that you have received all parts associated with each of the components.

Inspect your shipment carefully. If the shipment shows obvious signs of damage, retain original boxes and packing material for inspection by the carrier, and contact them immediately. ClearOne is not responsible for product damage incurred during shipment.

No	Product Description	Product Model
1	Unite 260N Pro Camera	
2	Remote	
3	USB Cable	
4	AC Adaptor & Power Cord	
5	RS232 Cable	

Setup

Installation

This product should be placed on Wall mount or Ceiling Mount. Avoid contact with any liquid, gas or solid material that may cause corrosion.

Step 1

Refer to the diagram below to make sure the connections are correct.

Step 2

Connect to the power, can be by PoE (48V DC), or 12V DC power supply.


Step 3

On the back panel of the UNITE 260N Pro, set the Power Switch to On. The LED light on the front panel indicates the camera is powered on.

Step 4

The process of initialization is complete after the camera pan-tilt rotates to the maximum position of top right and returns to the center.

Note: When the camera is connected, it will appear as a microphone device. The camera only provides audio if you plug 3.5 mm analog line in connector.

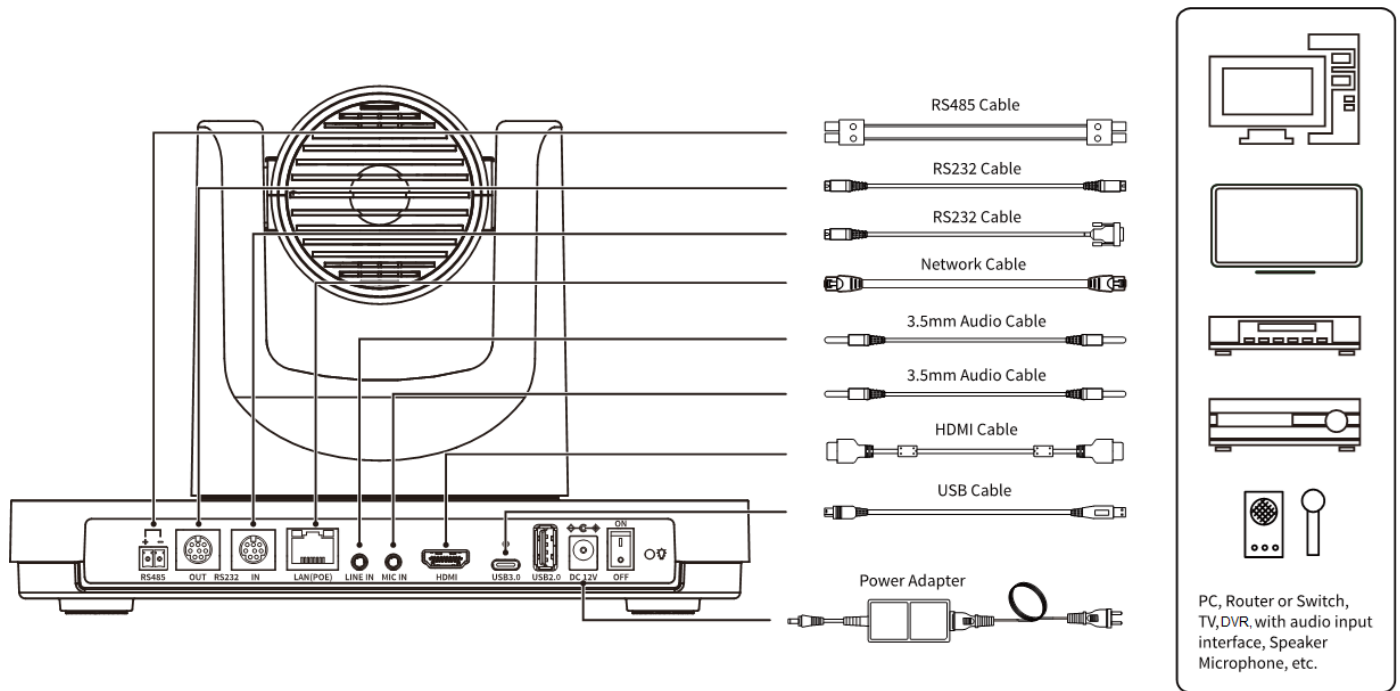

Note: If the position preset 0 has been stored, the position preset 0 will be called up after initialization.

Remote Control



No.	Name	Function Description
1	Standby Key	On/Off
2	Number Key	Preset setting or transfer preset
3	*Key	For use with other keys
4	Preset Key	Preset: Setting Preset + Number key(0-9)
5	HOME key	Confirm selection or press to turn PTZ back to the middle position
6	Return Key	Return back to the last menu level
7	Zoom Keys	Moving between wide/narrow angle lens modes, slowly or quickly
8	L/R SET Key	Standard: Simultaneously press L/R SET key + 1 Reverse: Simultaneously press L/R SET key + 2
9	Focus Keys	Auto/Manual/Far-end/Near-end focus
10	CAMERA SELECT Keys	Select the camera to control
11	#Key	For use with other keys
12	IR Remote Control Key	[* + # + F1/F2/F3/F4]: NO.1/2/3/4 address
13	Reset Key	Delete preset: [RESET] + Number key (0 – 9)
14	PTZ control keys	After zoom, press to move the PTZ
15	Menu Key	Used to enter/exit OSD Menu
16	BACKLIGHT Key	Turn on/off backlight
17	P/T RSTkey	For use with PTZ cameras
	Shortcut Set	Tracking mode/Short press to stop Auto Framing or Auto Tracking [*] + [#] + [1]: OSD menu default English [*] + [#] + [3]: OSD menu default Chinese [*] + [#] + [4]: Display current IP address [*] + [#] + [6]: Quickly recover the default [*] + [#] + [8]: Display the camera version [*] + [#] + [9]: Quickly set up inversion [*] + [#] + [MANUAL]: Restore to default IP address.

Functionality for F1 and F4

Short press F1 to start Auto Framing, and short press F4 to pause or start, and long press F4 to close Auto Framing.

No.	Function	Button
1	Auto framing	ON (F1) OFF (F4)
2	Auto tracking	On (F3) OFF (F4)

Safety Precautions

Installation

This product should be placed on a smooth flat surface, or bracket-mounted, if desired. Avoid contact with any liquid, gas or solid material that may cause corrosion.

Do Not Disassemble

This product has no user-repairable parts. Damage caused by unauthorized disassembly is not covered by warranty.

Notice

Electromagnetic fields at specific frequencies may affect image quality.

Troubleshooting

Image

Image is jittery when the camera is properly connected:

- 1) Ensure that the camera is installed in a stable position.
- 2) Remove vibrating objects/machinery from the proximity of the camera.

Control

Remote control not operating

- 1) Check/replace batteries in the remote control unit.
- 2) Ensure the camera working mode is correct.