

ClearOne®

COLLABORATE® Live 600



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 600
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support

Tel: +1.801.974.3760
collaborate.support@clearone.com

Notices




© 2023 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0072-001v1.1 April 2023

 
Components Included

COLLABORATE Live 600

No	Description	Products
1	<p>COLLABORATE Live 600 codec with power supply and COLLABORATE Remote control with dongle</p>	
2	<p>910-2100-018</p> <p>UNITE 260 pro camera, power supply, HDMI cable and RS232 serial control cable.</p> <p>Note: The remote control inside the camera box is only for any advanced configuration in the camera, if required. For the camera's control, use the COLLABORATE Codec Appliance's remote control.</p>	
3	<p>910-156-200-00</p> <p>CHATAttach 150, cables and power supply.</p>	

Making the Connections

Connect the CHATAAttach 150, the UNITE 260 camera, Ethernet, and monitor(s) to the COLLABORATE Live 600 codec as shown.

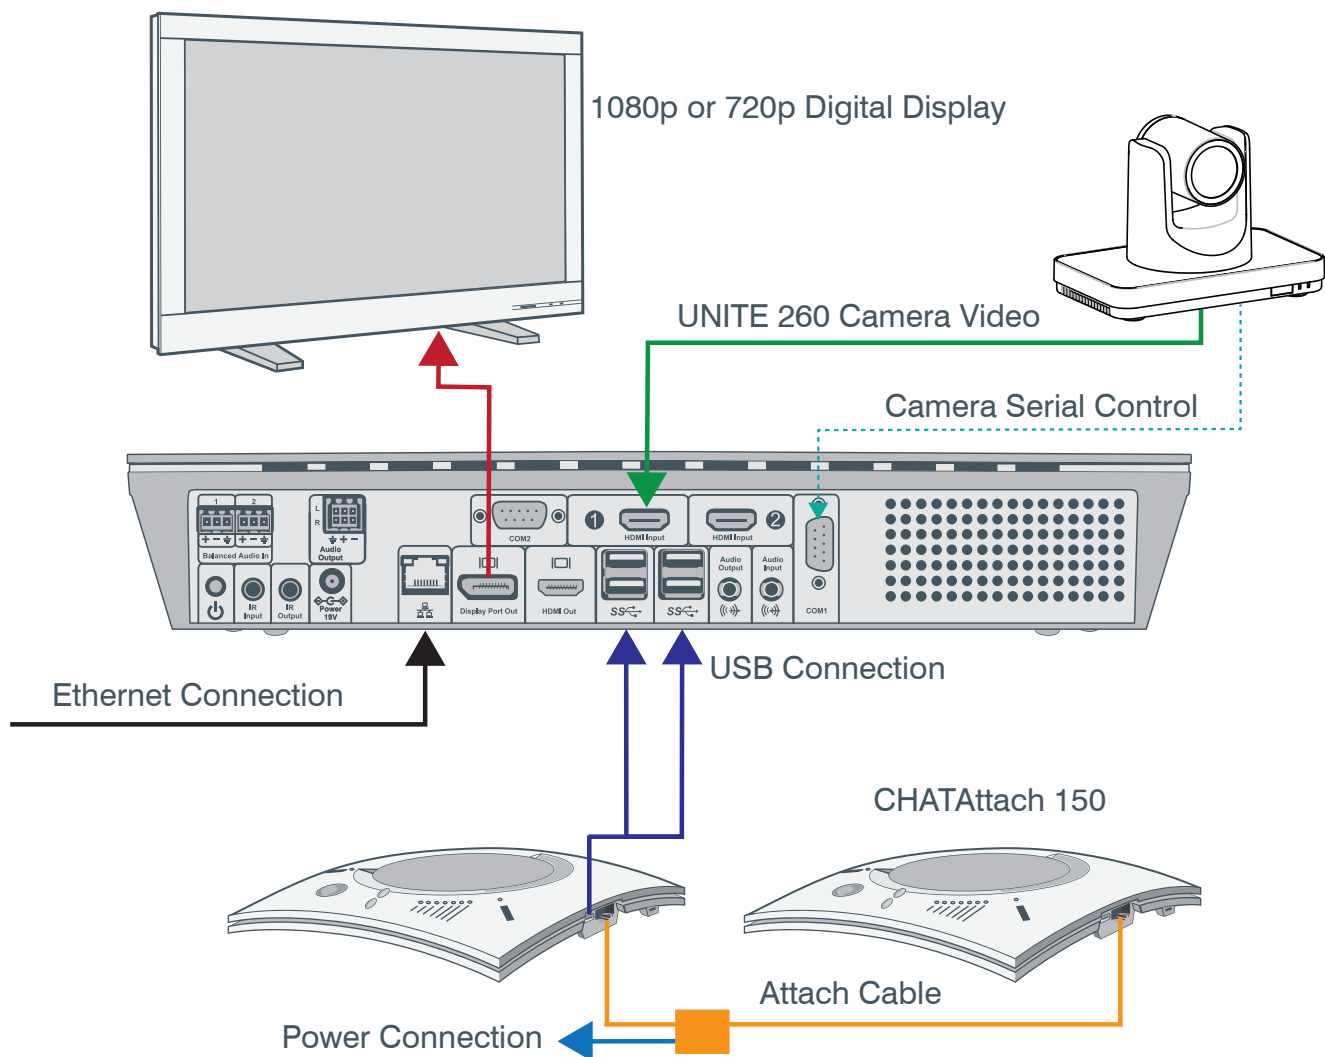

Note: Audio and power connections not shown.

Connecting the Remote Control Dongle

 
The Remote Control includes a dongle that plugs into the FRONT USB port on the codec.



Audio Output Options

There are three audio output options, accessed from the back of the COLLABORATE Live 600, for connecting the audio.

1. Balanced Audio output to an amplifier that is connected to speakers
2. Line output to powered speakers
3. HDMI output to the primary monitor

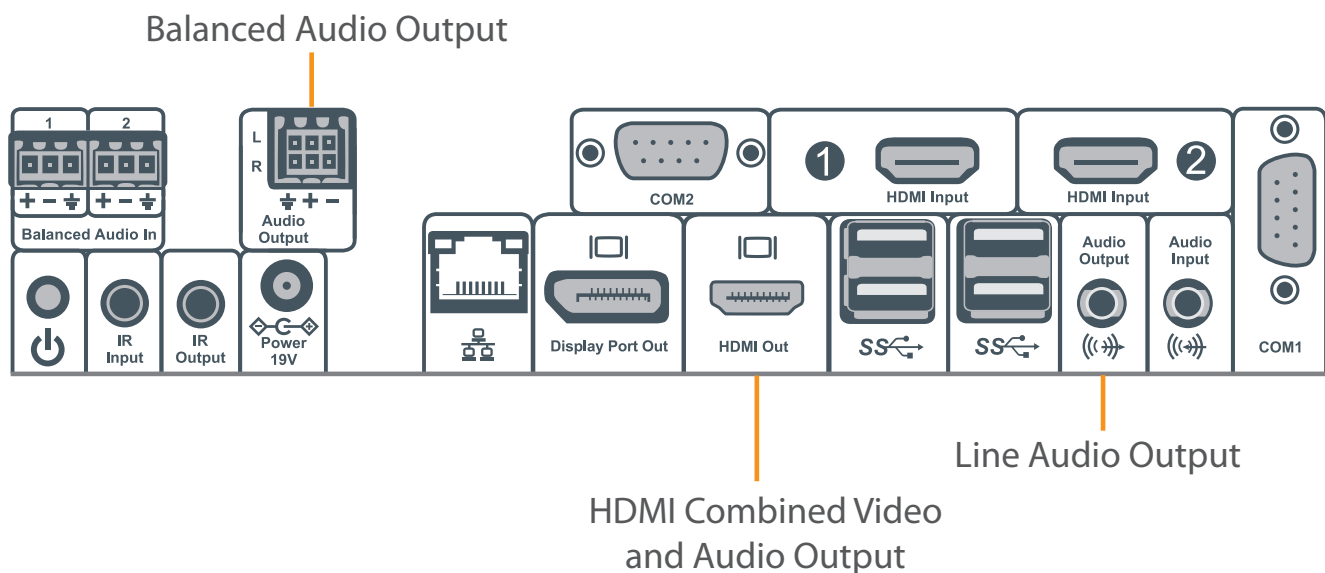



Configuring Display Settings

After all peripherals are connected to the unit, turn the unit on.

Once COLLABORATE Live is loaded – you will see your local camera video on your screen.

Using the remote control, navigate to the display settings:

  Settings > Advanced > Display

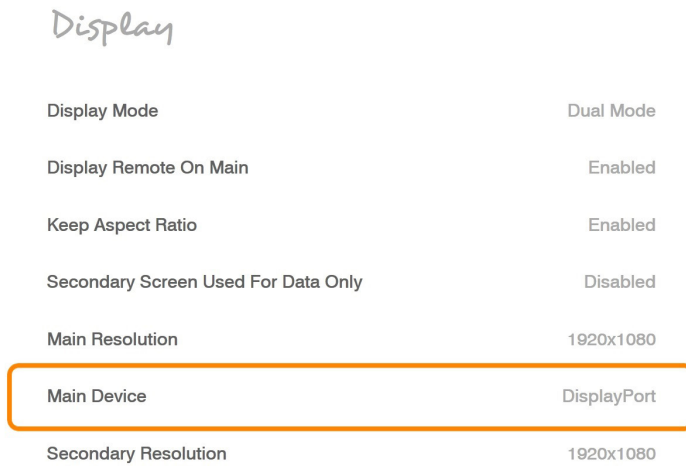
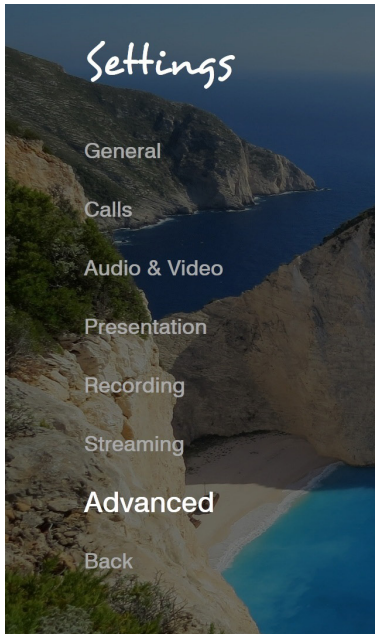


According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

Configuring Audio Settings

The COLLABORATE Live 600 audio input is CHAT 150 and audio output is set to the Balanced Audio Output.

  Verify this in COLLABORATE **Settings > Audio & Video**

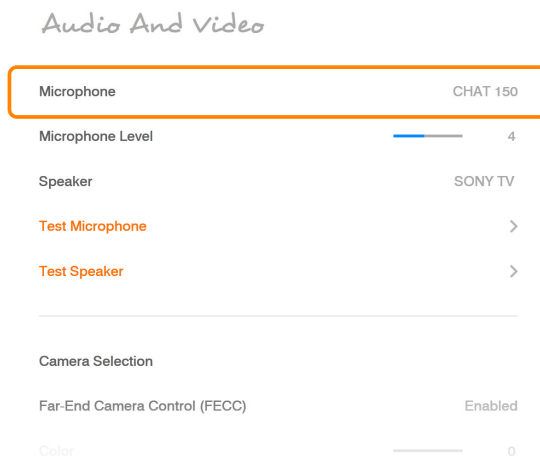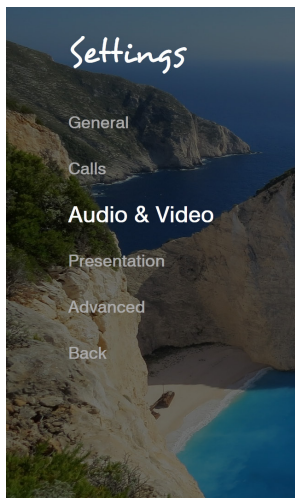


 **Note:** It is recommended to use the CHATAttach 150.

Configuring Network Settings

Using your remote control, navigate into the network settings:

 Settings > Advanced > Network

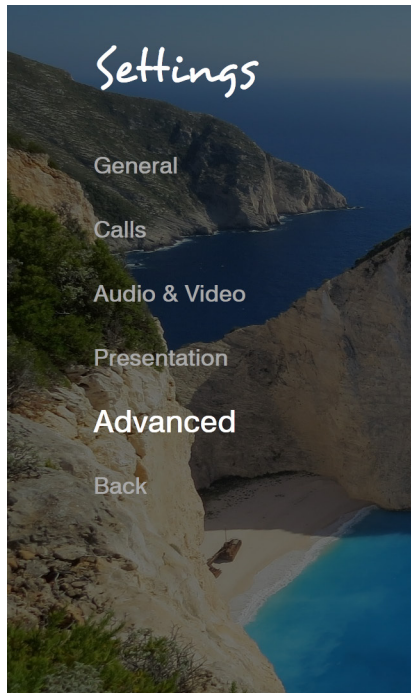

Network

 
Obtain Address From DHCP Disabled ⓘ

- IP Address 10.80.16.173
- Subnet Mask 255.255.255.0
- Default Gateway 10.80.16.1

Ethernet Speed 1000.0 Mbps

Obtain DNS Automatically Disabled

- DNS Server 10.80.11.116
- Additional DNS Server 10.101.11.111

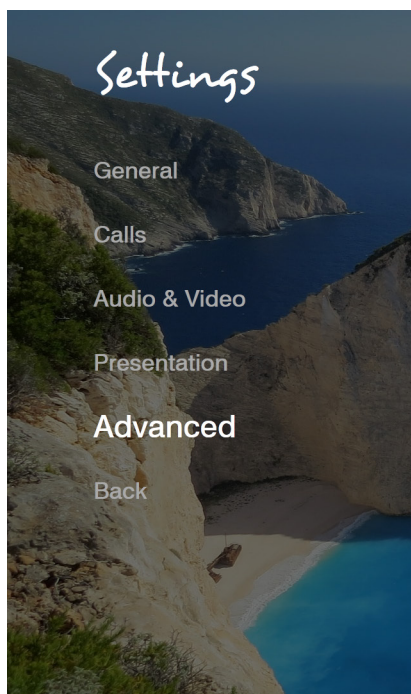

Network

Ethernet Speed 1000.0 Mbps

Obtain DNS Automatically Disabled

- DNS Server 10.80.11.116
- Additional DNS Server 10.101.11.111

DNS Suffix clearone.com

NAT Mode Disabled

NAT Address (Empty)

The COLLABORATE Live 600 obtains its IP automatically by default from the DHCP server. Set “Obtain Address From DHCP” to “Disabled” to manually configure network settings.