


CEILING TILE MICROPHONE ARRAY SURFACE MOUNT KIT 24IN

This kit is compatible with ClearOne ceiling tile microphone array devices.

To install the surface mount kit, first assemble the frame, and then attach the frame to the ceiling.


Step 1

On each end of one frame piece, insert a spring clip into the inside channel.

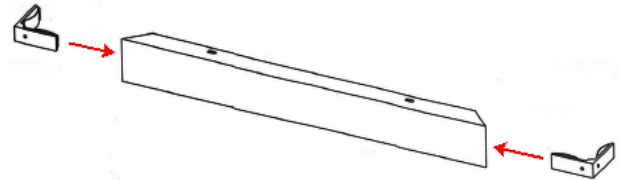


Step 2

At each end of the frame piece from step 1, slide the inside channel of another frame piece onto the clip at to form a u-shape.

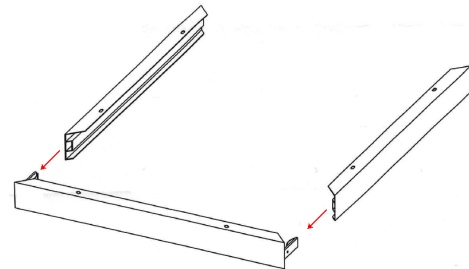

Step 3

Lift the u-shaped frame into place against the ceiling.
Attach the frame to the ceiling.

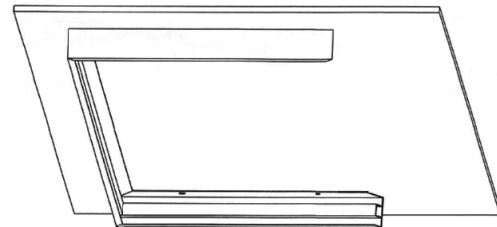

Step 4

Determine which version of the BMA 24IN unit you have.
Some versions require the Retrofit Brackets to be attached before installing the BMA in the Surface Mount Kit 24IN.

Straight Lines – Brackets Required

If the back panel structure has straight lines as shown in orange, then the Retrofit Brackets must be attached at the green check mark locations prior to installing the BMA in the Surface Mount Kit.

Proceed to Step 5.

Angled Lines – Do not install Brackets

If the back panel structure has angled lines as in orange, then the brackets do not need to be installed.

Skip to Step 6.



Straight orange lines:
Install Retrofit Brackets at the green check mark locations





Angled orange lines:
Do not install Retrofit Brackets

Step 5

Attach the Retrofit Brackets only if the BMA has the back panel structure with straight lines as highlighted in Step 4.


Instructions:

1. Lay the BMA on a flat surface with the back panel facing up.
2. Peel the tape backing from a bracket.
3. Orient the bracket so that the tape will stick to the side of the BMA.
4. Position the bracket so that it centered along an edge as shown with the green check marks in the diagram on the opposite page.
5. Press firmly on the bracket to adhere to the BMA.
6. Repeat for all 4 sides.
7. The BMA is ready to install in the Surface Mount fixture.

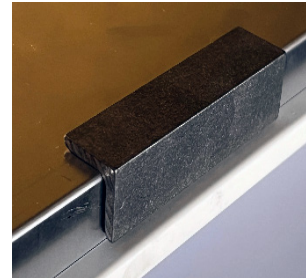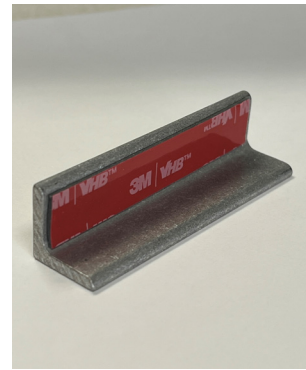


Step 6

Attach cables to ports on the back of the ceiling tile microphone. Then slide the microphone onto the recessed edges of the frame.

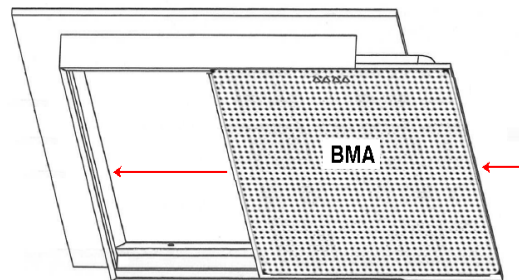

Step 7

At each end of the frame piece from step 1, slide the inside channel of another frame piece onto the clip at to form a u-shape.

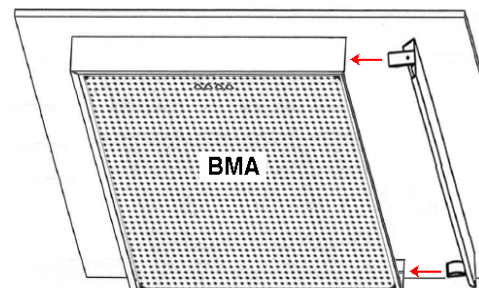

Warning! Surface mount kit must be independently supported by building structure according to all applicable national and local codes.

<p>Important!</p> <ul style="list-style-type: none"> • Examine shipment and report damage to your transportation carrier. • Install in accordance with all applicable local codes. • Ensure that power is off before you start installation. 	<p>Part Number:</p> <ul style="list-style-type: none"> • 910-3200-210 <p>Included Components:</p> <ul style="list-style-type: none"> • Frame piece (4) • L-shaped spring clip (4) • Retrofit bracket (4)
--	--

SALES AND INQUIRIES

Headquarters

5225 Wiley Post Way Suite 500
Salt Lake City, UT 84116

Headquarters

Main: +1.801.975.7200

Sales

Tel: +1.801.975.7200
sales@clearone.com

Tech Support

Tel: +1.801.974.3760
audiotechsupport@clearone.com