

ClearOne®

Versa™ USB22D



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 500
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support

Tel: +1.801.974.3760
audiotechsupport@clearone.com

Notices

© 2023 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0172-001v1.0 October 2023

Important Safety Information

1. Before you set up the Versa USB22D, read this manual carefully. Follow the setup instructions indicated in this manual.
2. Keep this manual for future use.
3. To prevent electric shock, do not remove screws or the Versa USB22D, housing. No self-serviceable parts are inside the housing

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGEROUS VOLTAGE INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN
AVIS RISQUE DU CHOC ELECTRIQUE
- NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.



Use only in non-tropical locations.



Use only at altitudes of 2000 meters or less.

SEE MARKING ON BOTTOM/BACK OF PRODUCT

Packing List


Verify that you have received all parts associated with each of the components.

Inspect your shipment carefully. If the shipment shows obvious signs of damage, retain original boxes and packing material for inspection by the carrier, and contact them immediately. ClearOne is not responsible for product damage incurred during shipment.

No	Description	Quantity
1	Versa USB22D dongle	1
2	USB C to USB C cable	1
3	USB Type A to USB C cable	1

Setup

The Versa USB22D can be used to connect any computer to any Dante-enabled audio device. The example below shows how to connect with the ClearOne BMA 360D to have a professional quality audio conferencing system for any in-room computer or bring-your-own-meeting (BYOM) computer.

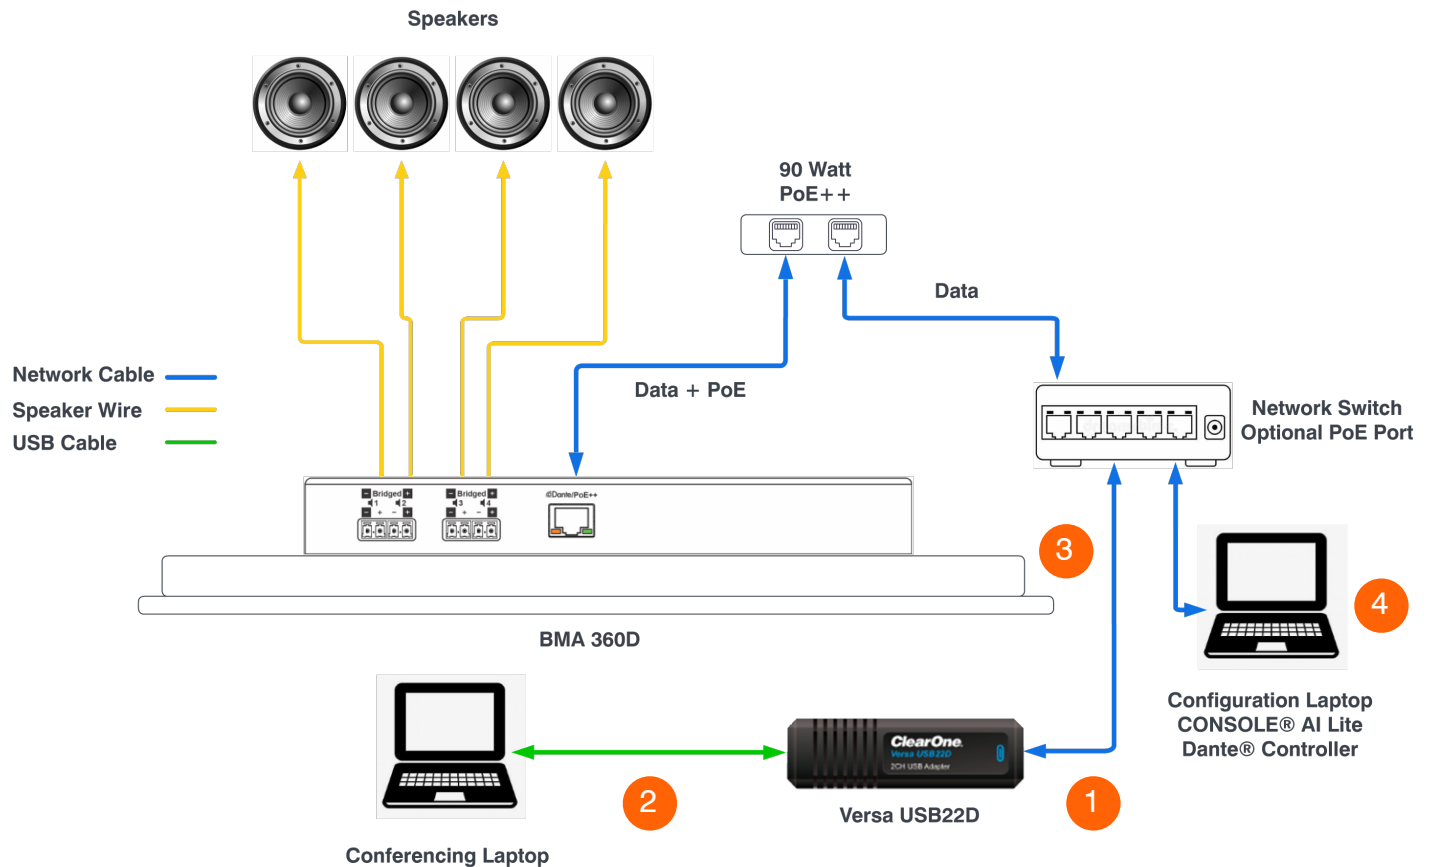

Connections

Refer to the numbered diagram below for these connections.

- 1 Connect the USB22D to the network switch using a standard network cable (cable not provided). To keep the USB22D always powered on, use a network switch with a PoE port or insert a PoE injector in between the switch and the USB22D.
- 2 Connect the USB22D to the computer using one of the provided USB cables.
- 3 Connect the BMA 360D system to the network switch. Refer to the BMA 360D Quick Start Guide and User Manual for more information.
- 4 Configure the Dante routing using Audinate's Dante Controller software.

Safety Precautions

Installation

Avoid contact with any liquid, gas or solid material that may cause corrosion.

Do Not Disassemble

This product has no user-repairable parts. Damage caused by unauthorized disassembly is not covered by warranty.

Notice

Electromagnetic fields at specific frequencies may affect audio quality.